



# Fly Screen Door Installation Instructions


Each assembled door will come with the following components



1 door made to your dimensions



1 door closer

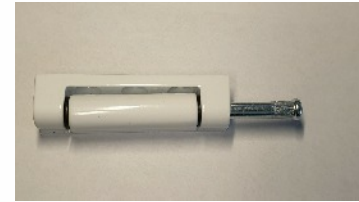

1 pair of hinges




Door handle



Brush strip



Assorted screws

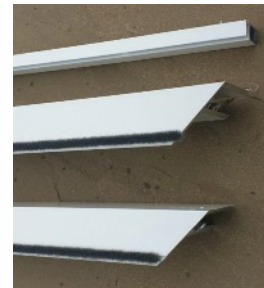

Sub frame - if ordered

# Fly Screen Door Installation Instructions



1. Decide which way you want the door to open and then fit the hinges. Drill 2 screws into the frame and adjust the height of the screws so that the hinges rest against the screw heads and sit flush with the edge of the frame. Set the screws at the ends of the hinge
2. Put the pin back into the hinge to assemble and then position the door onto the frame or sub frame and mark the position of the hinges. Remove the pin from the hinges and then fix the hinges onto your marked position.
3. Position the door back onto the hinges and replace the pins.

# Door Closer



Extending rod



Door jamb bracket



Fly screen door bracket



Screws pins and holder

The door jamb bracket needs to be positioned and screwed to the existing door frame or subframe, you will need 40mm for this to fix onto. It is important that the straight edge faces the screen door otherwise it won't fully close the door.


Slide the holder along the extending rod, this can be used to hold the door in the open position once fully installed

Using the long connecting pin hold the fly screen door bracket onto the opposite closer end

It is important at this stage that the piston is extended by around 20mm and held in place with the holder, this ensures that pressure is applied to the door when in the closed position and the piston isn't at rest

Make sure that door is in the fully closed position and then mark the position of the fly screen door bracket on the fly screen door and drill pilot holes and then secure the bracket to the door with the short screws

Open the door and release the holder back along the extending rod and the door opener will close the door

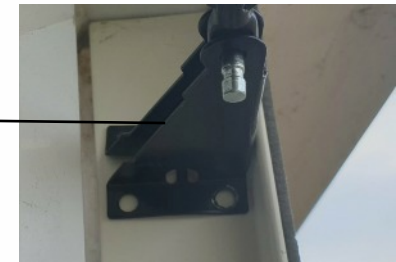


Holder

# Sub Frame

## OPTIONAL SUB FRAME

The sub frame will have 5 sections, 2 upright fixing strips and 3 external frame sections.

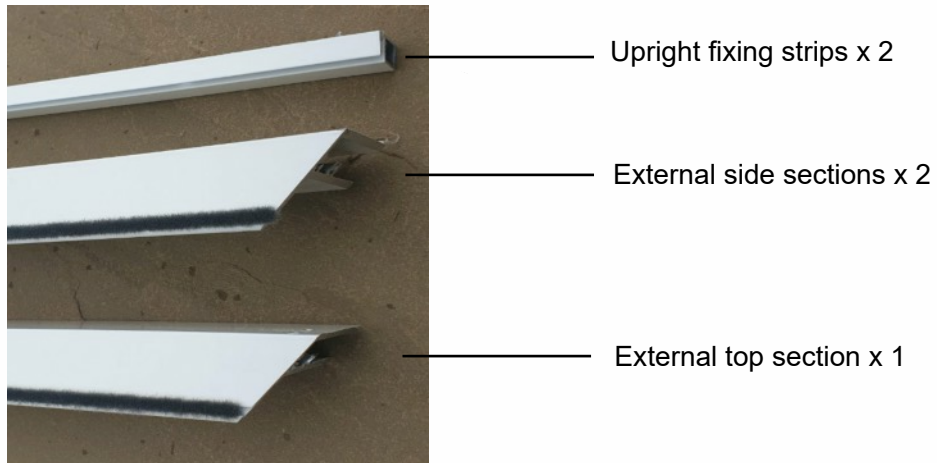


1. Place the external frame sections in position on a flat surface and screw the top section to the 2 side sections





2. Position this frame onto the door frame where you want it to be fixed and make sure it is straight using a spirit level and then mark the upright positions using a pencil

3. Place the upright fixing strips inside the marked line and drill and screw into position making sure that they are vertical

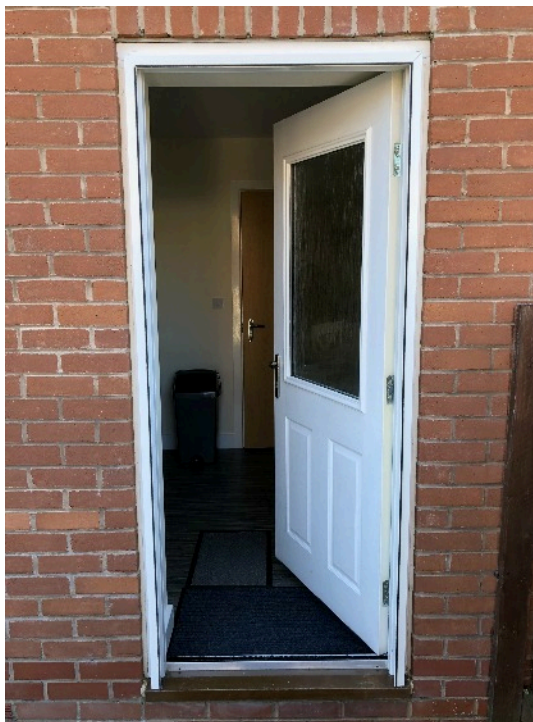

4. Push the external frame onto the uprights, drill and secure with the small screws

## Fly screen door sub frame

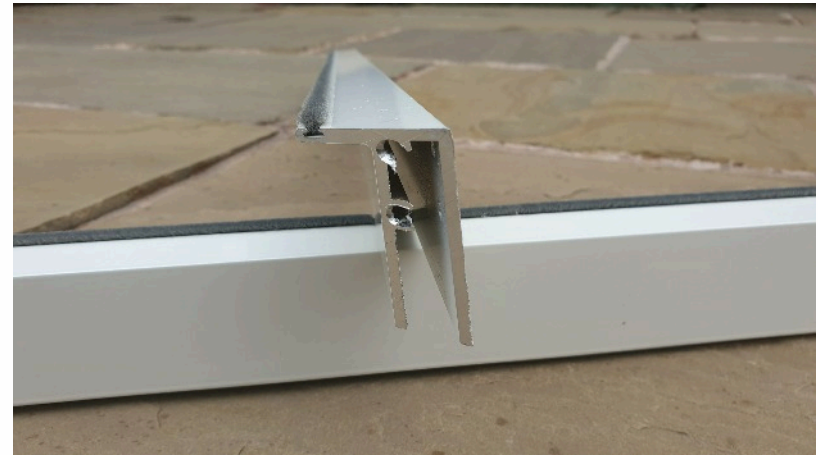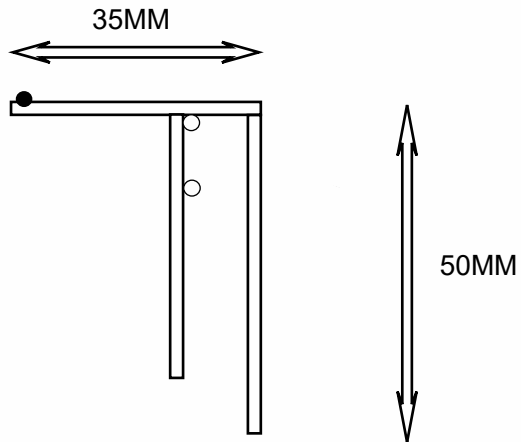

Aluminium sections finished in white or brown with integral brush pile to create a seal with the fly screen door