


INSTALLING ROLLER FLY SCREENS


The screens can be fitted by either screwing to the reveal or frame or by using silicone adhesive to fit to the reveal or frame.

FRAME INSTALLATION

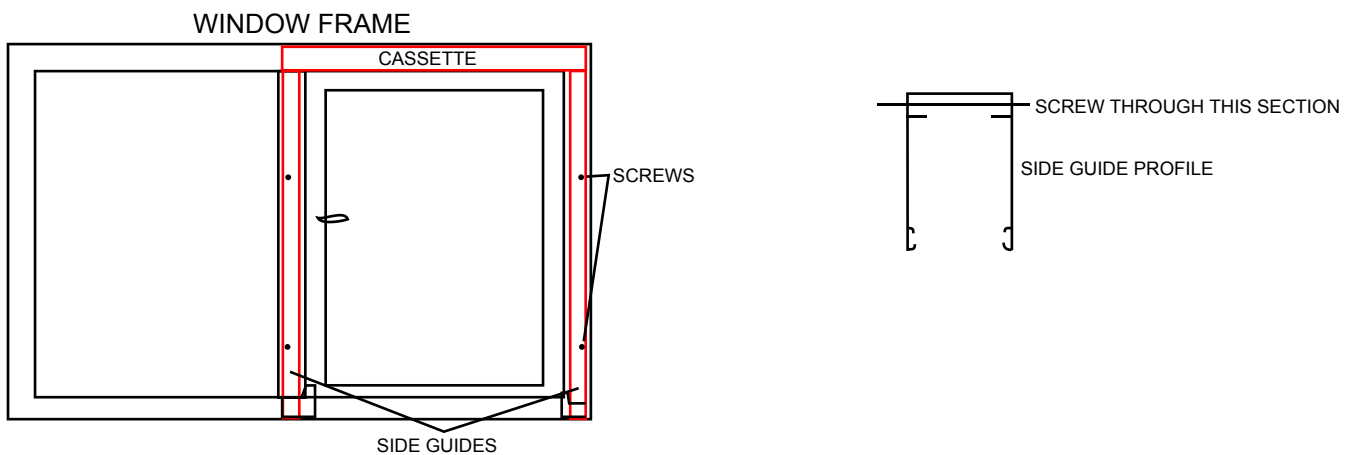

Drill 4 holes through the side guides and slot them into the roller cassette. Offer the unit up to the window and align. Test the operation of the cassette and then screw the side guides to the frame using the supplied screws and end caps. Alternatively the frame can be offered up to the window, aligned and then tilted forward to apply the adhesive, and then pushed into position testing the operation of the screen before allowing the adhesive to set for 8 hours.

REVEAL INSTALLATION

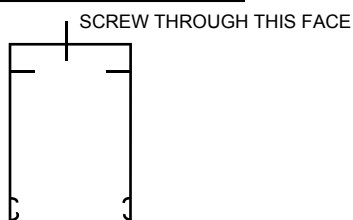

If you want to fit to the reveal of the window then you would drill and screw through the side of the side guides or use adhesive to fit to the reveal. Please note to reveal fit you would have to cover the whole of the window including fixed panes. Reveal installation is usually used on single opening windows.

Any problems call us on 01254 386776