



Magnetic fly screen assembly instructions

TEL: 0800 804 6378


Each fly screen kit contains the following items which will build 1 complete fly screen



4 corner pieces



Mesh insertion tool

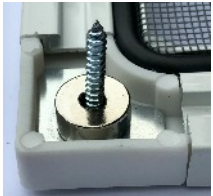

4 magnets and screws



Fly mesh



Rubber beading



4 sections of Aluminium framing cut to size



Magnetic fly screen assembly instructions



1. The frame will come pre cut to your ordered sizes.



2. Assemble the frame by pushing the corner pieces into the frame, you may need to tap these in using a hammer.



3. Lay the assembled frame on a flat surface with the inner groove facing you. Place the mesh over the panel and start to push the rubber gasket into the groove using the tool supplied. Trim off any excess mesh with a sharp Stanley knife.



4. You will then have the assembled panel.

5. Place the panel over the window opening in the desired position and mark the position of the corners with a pencil.

Remove the screen and the screw the magnets x 4 into the positions marked, corresponding with the corners. It is best not to over tighten the screws and to allow the magnets slight movement. Place the panel over the window and it will snap onto the magnets holding it in position.

SAFETY NOTICE

To separate magnets, grasp the outside magnet, slide it off the stack and pull it away, don't allow the magnets to snap back together and keep them far apart so that they can't jump together.

Allowing them to jump together could damage the magnet or even shatter it, under no circumstances should you drill or machine the magnets.