



## How to Measure for Roller Fly Screens for Doors

---

Using the images on the next pages you will be able to confidently measure your doors so that you can place an order for the roller fly screens.

There are 2 options for the installation depending on your door configuration, either face fit directly onto the door frame or recess fit whereby the fly screen is set back and fitted to the inner wall. The fly screens can be fitted either inside or outside.

### **RECESS INSTALLATION**


**A** - full width from wall to wall, measure top middle and base and use the narrowest measurement for the overall width.

**B** - again it is the full height measurement taken in 3 different positions, taking the narrowest measurement. Please note that the maximum difference between the narrowest and largest measurement must not exceed 10mm's

### **FACE FIT**

Measurement **A** - the narrowest measurement available to be able to fix the screen directly onto the frame



Measurement **B** - full height measurement, taking the narrowest measurement.

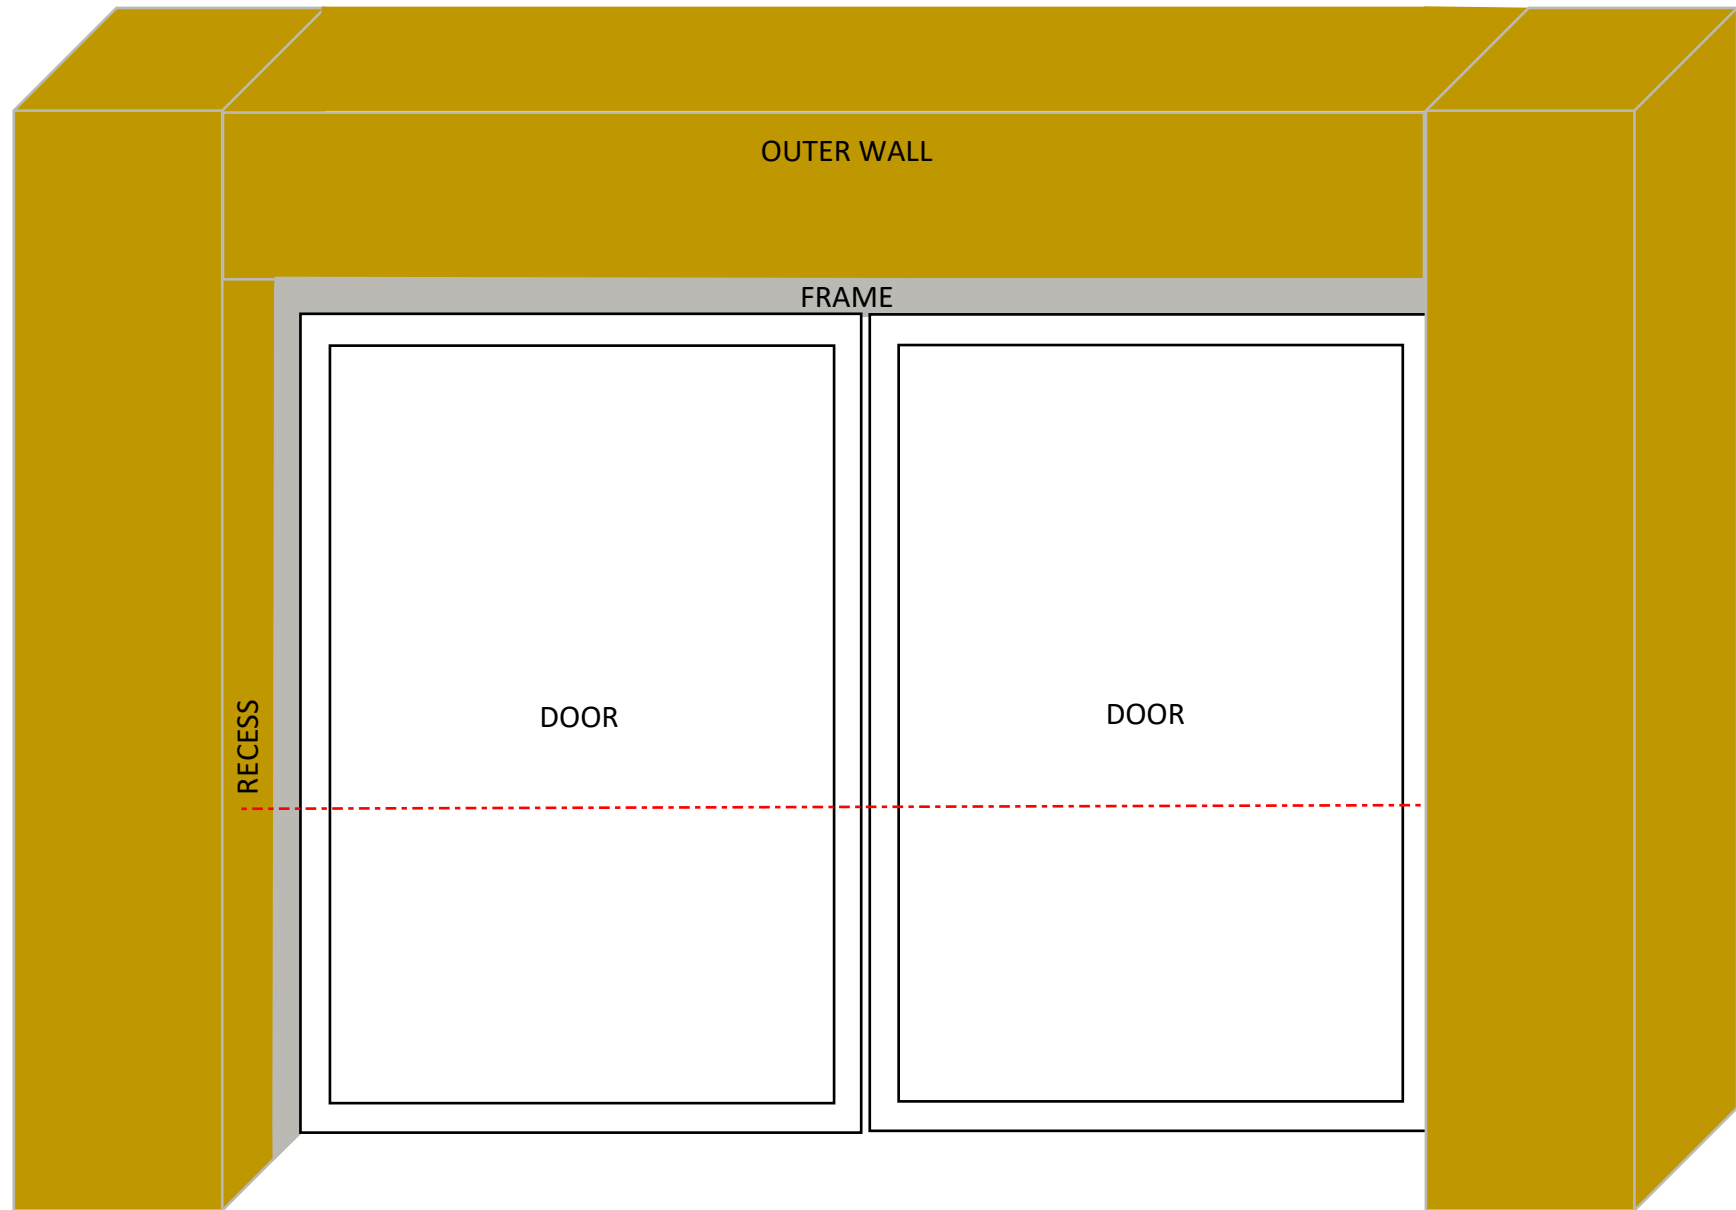

The recess is the inner wall section, either inside or outside, before the door frame

## RECESS FIT

If you take 3 measurements on the width and height and use the narrowest measurement for ordering

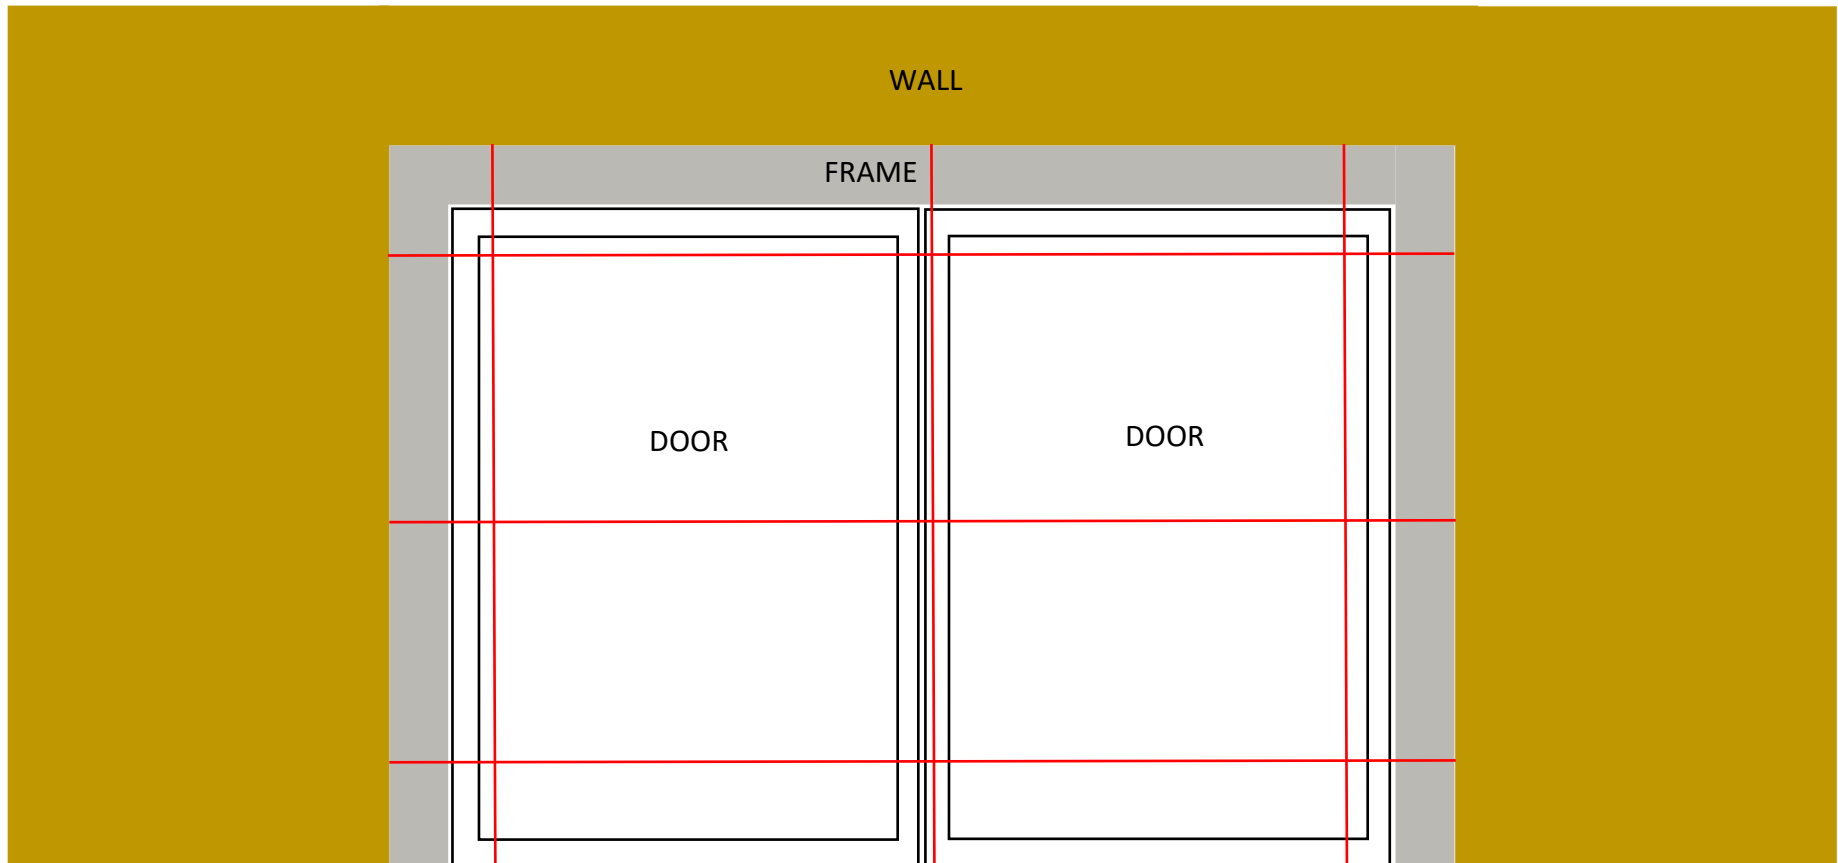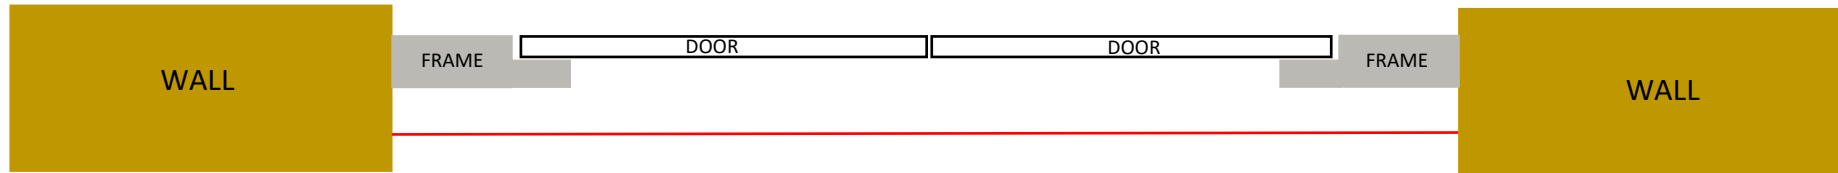



### FACE FIT OPTION

**A** - This measurement is the overall width, take 2 measurements at the narrowest points and use the narrowest measurement.

**B** - Again take 2 measurements and use the narrowest dimension.