



Sliding fly screen assembly instructions

TEL: 0800 804 6378

Each fly screen kit with 2 panels contains the following items



8 corner pieces
Wheels with horizontal kit
Friction pads and springs with vertical kit



Mesh insertion tool and allen key



4 Sections of outer frame with 4 corner pieces



Rubber beading



8 sections of inner frame for 2 panel slider



Fly mesh for 2 panels

Sliding fly screen assembly instructions



1. The frames will have been supplied pre cut to your supplied dimensions.

Use the Allen key to secure the corner pieces into the frame profiles ensuring;

HORIZONTAL SLIDERS

The wheels are at the base of the finished panel and the top corner piece is inserted with the longer section of the corner in the top piece of frame.

VERTICAL SLIDERS

The pressure pads need to be positioned in the frame so that they will strike the side of the outer frame once the frame is assembled.




2. Lay the assembled frame on a flat surface with the inner groove facing you. Place the mesh over the panel and start to push the rubber gasket into the groove using the tool supplied. Trim off any excess mesh with a sharp Stanley knife.



3. Assemble the outer frame using the Allen key to secure the corner pieces.

OPTIONAL CROSS BRACE

Your screen may come with a cross brace depending on the overall height. To fit the brace position within the frame before inserting the mesh, drill 4 holes corresponding with the holes in the frame and screw to hold in place.

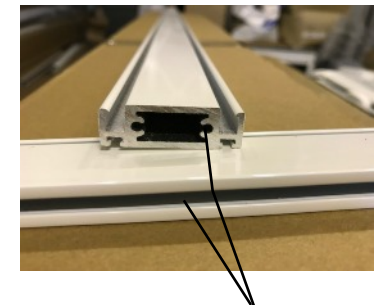

Drill holes to match these holes.

INSTALLATION OF SLIDING FLY SCREENS

These instructions are for the installation of the sliding fly screens into a window reveal for the horizontal sliding system. Please check the operation of the screen before securing the framework.

CHECKLIST ITEMS PER SCREEN

Outer frame x 4 sections

Outer frame corner pieces x 4

Fly screen shutters x 2 / 3 / 4 depending on width

Allen key x 1

1. Fit the internal outer frame corner pieces into the outer frame ensuring that the mitred corners are squared and meet correctly. Secure with the allen key.
2. Insert the fly screen shutters making sure that the internal runner wheels are at the base. Offer the shutter to the top internal frame pushing it up as far as possible then drop the base onto the bottom frame. Insert the shutters on the alternate base rail edges so they can slide past each other.
3. Check the operation of the shutters before proceeding.
4. Remove the shutters and offer the outer frame into the window reveal. Once the position of the frame has been decided drill through the side rails only at 2 positions either side. Remove the frame and drill and plug the wall.
5. Replace the frame and secure with screws but do not overtighten or distort the outer rail. It is advisable not to fasten through the top and base rail as this can distort the runners.
6. Offer the shutters back into the outer rail and again check the operation.
7. It is advisable to seal around the outer frame with a quality silicone to secure and seal the frame.

If you have any problems then you can contact us on 01254 386776